 
 



SENSOR LOCATIONS

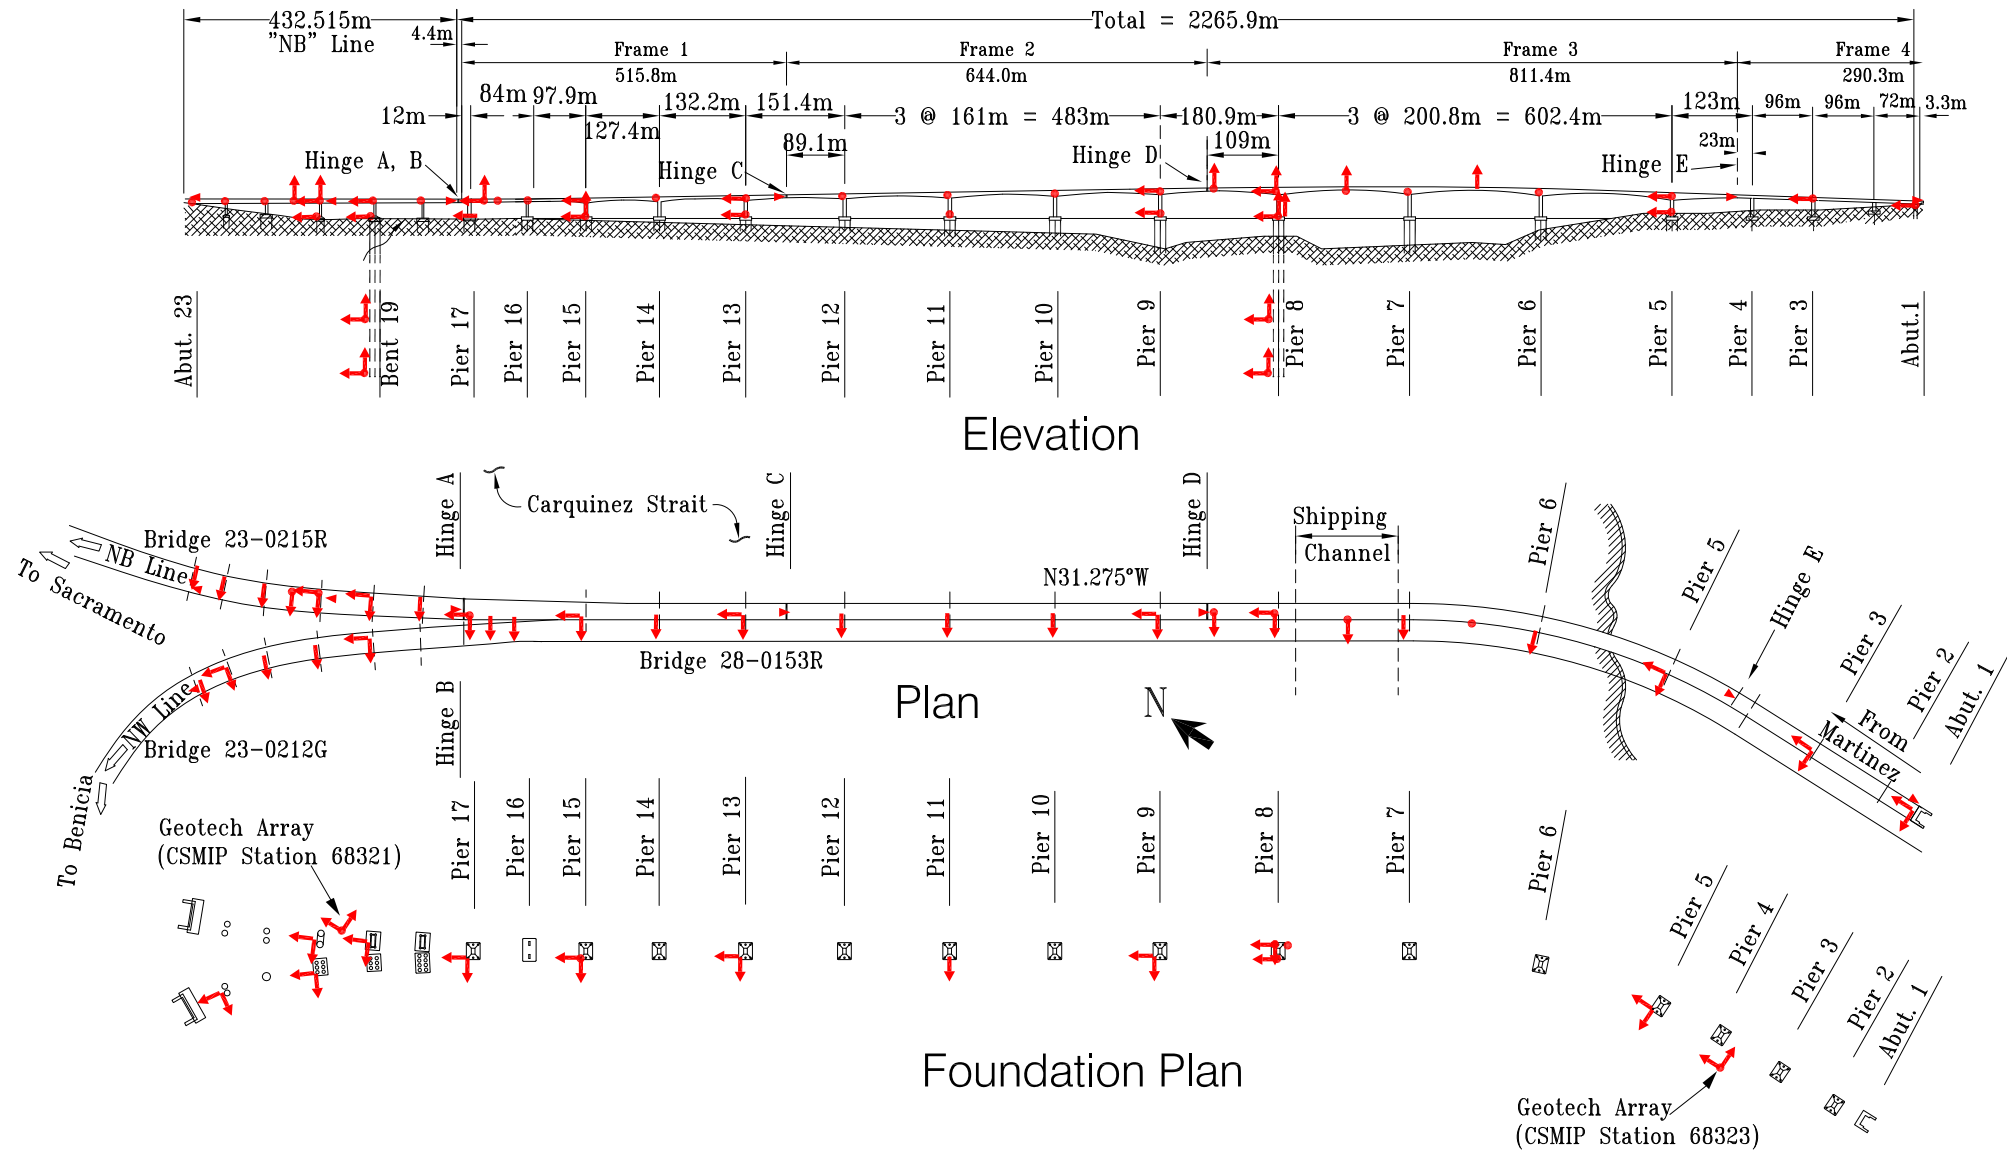


SENSOR LOCATIONS - Approach (NB Line)

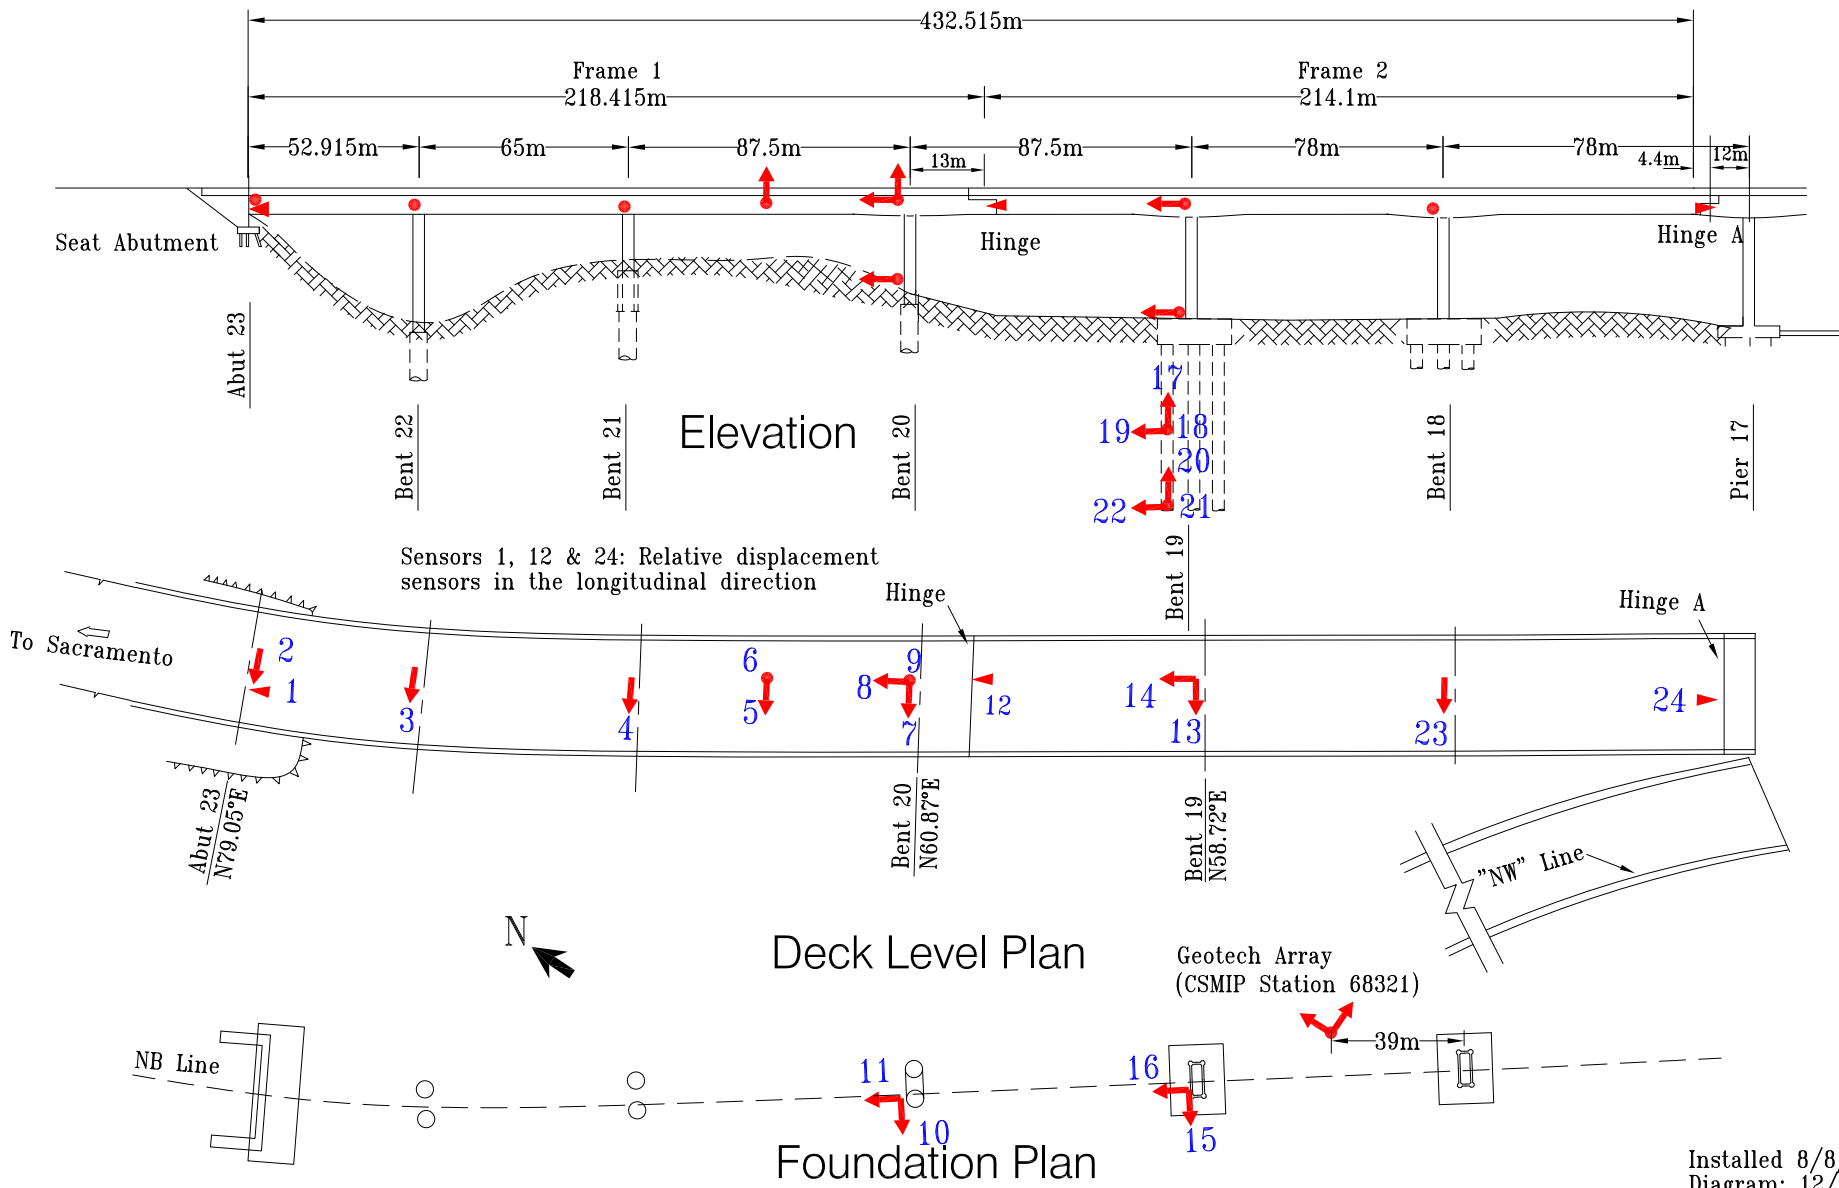

 SENSOR LOCATIONS - Approach (NB Line)

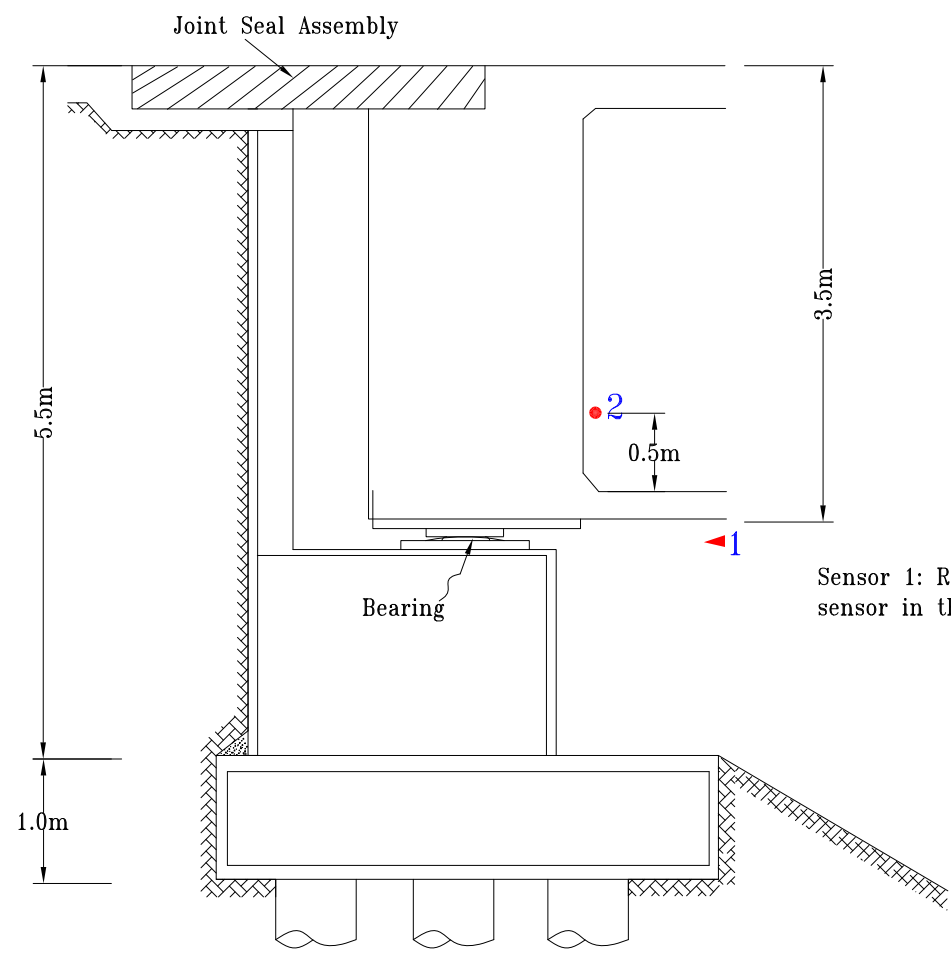


N/S Section at Abut. 23

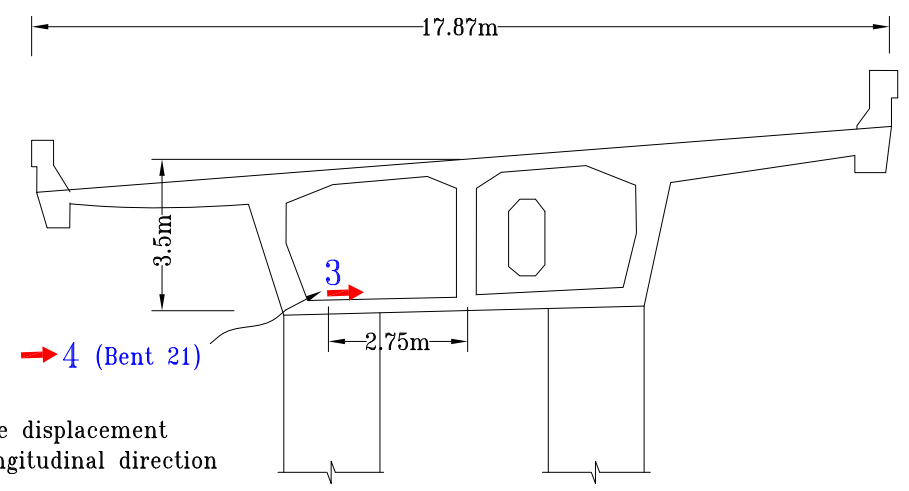



E/W Section at Bent 22
(Bent 21 Similar)

Sensor 1: Relative displacement
sensor in the longitudinal direction

 
Sensors are located
on the floor.
North of bent cap.



SENSOR LOCATIONS - Approach (NB Line)

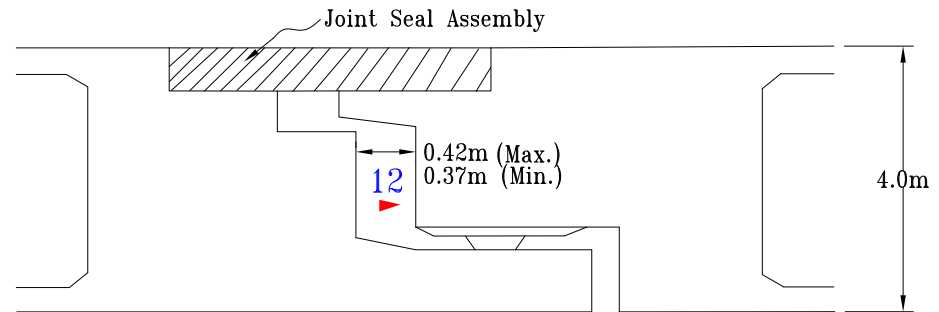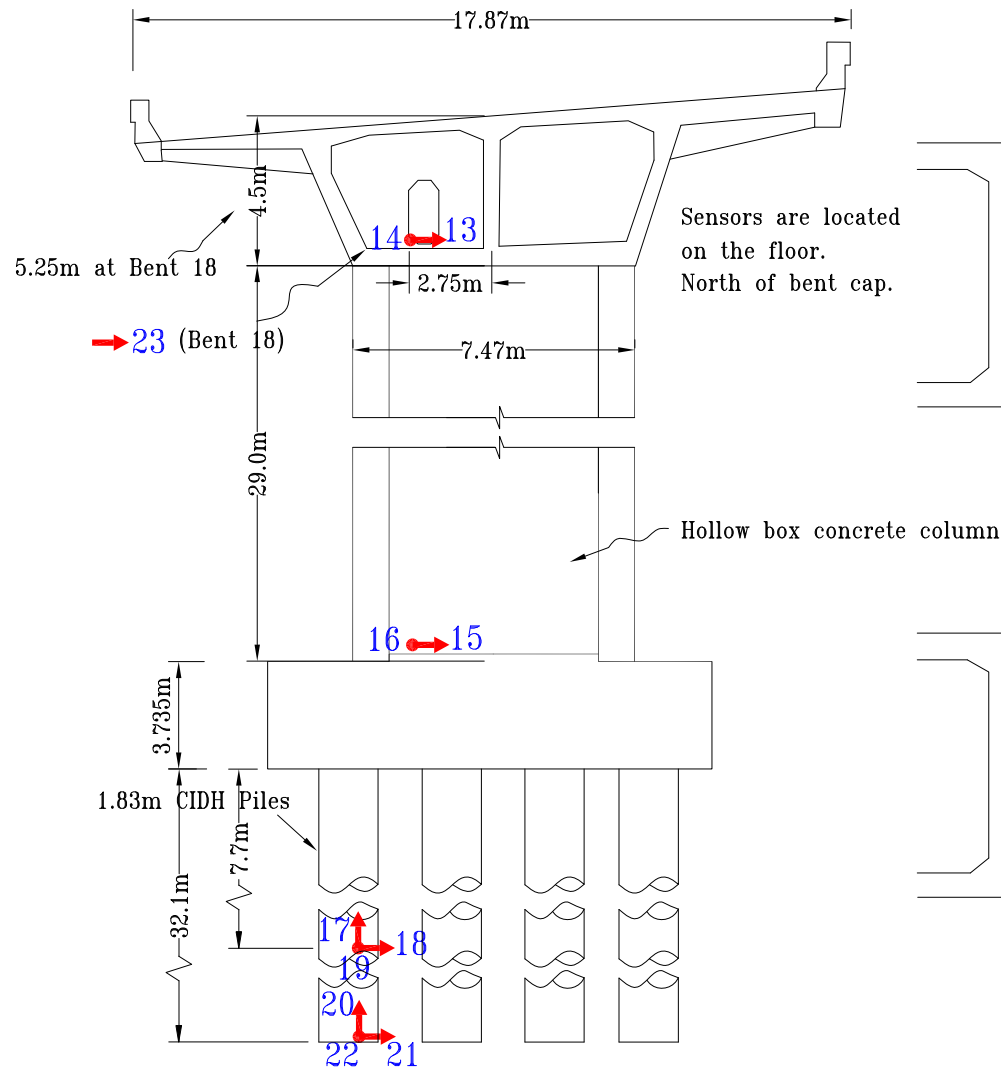


N/S Section of Hinge near Bent 20

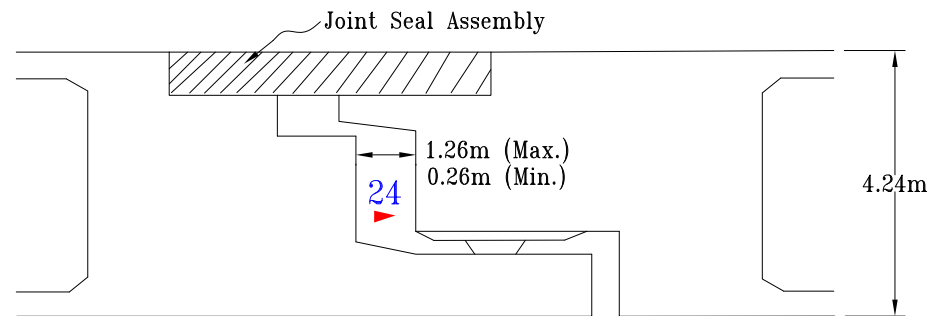

N/S Section of Hinge A near Pier 17


E/W Section at Bent 19 (Bent 18 Similar)

SENSOR LOCATIONS - Approach (NW Line)

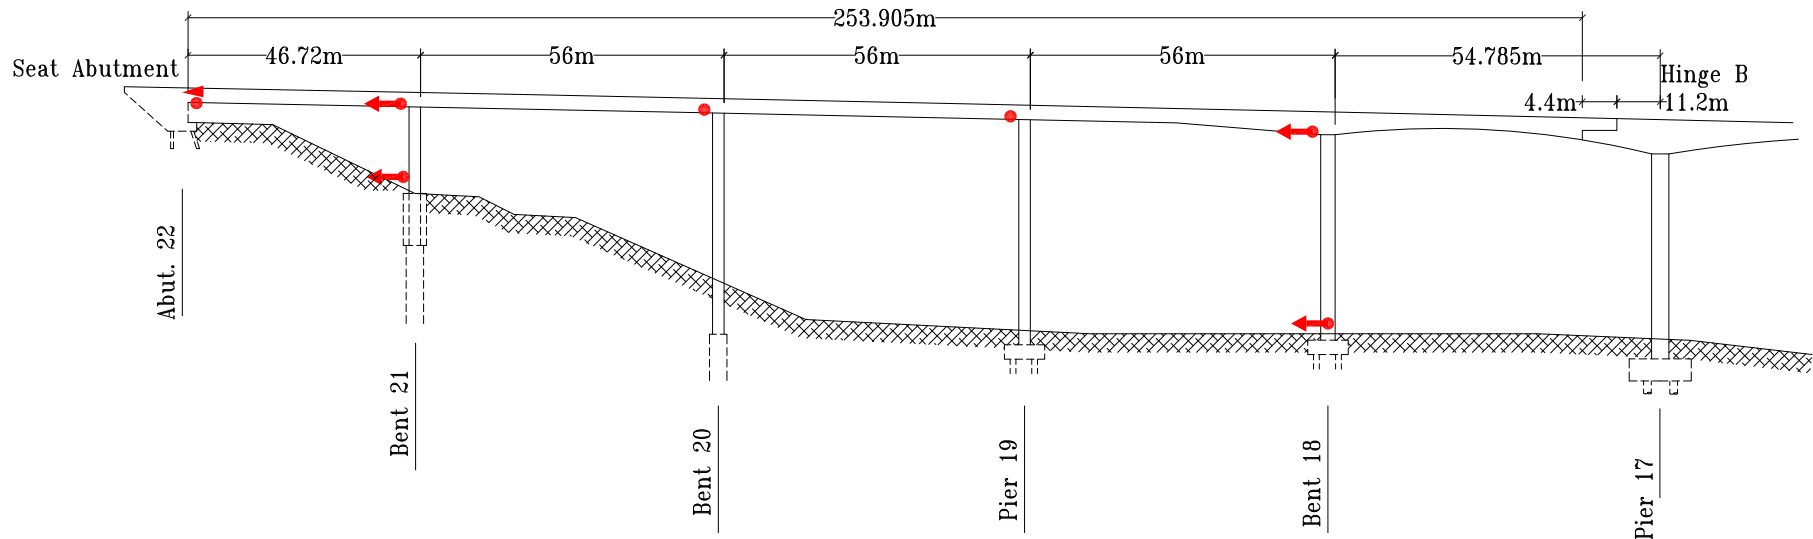

Elevation

Sensor 25: Relative displacement sensor in the longitudinal direction

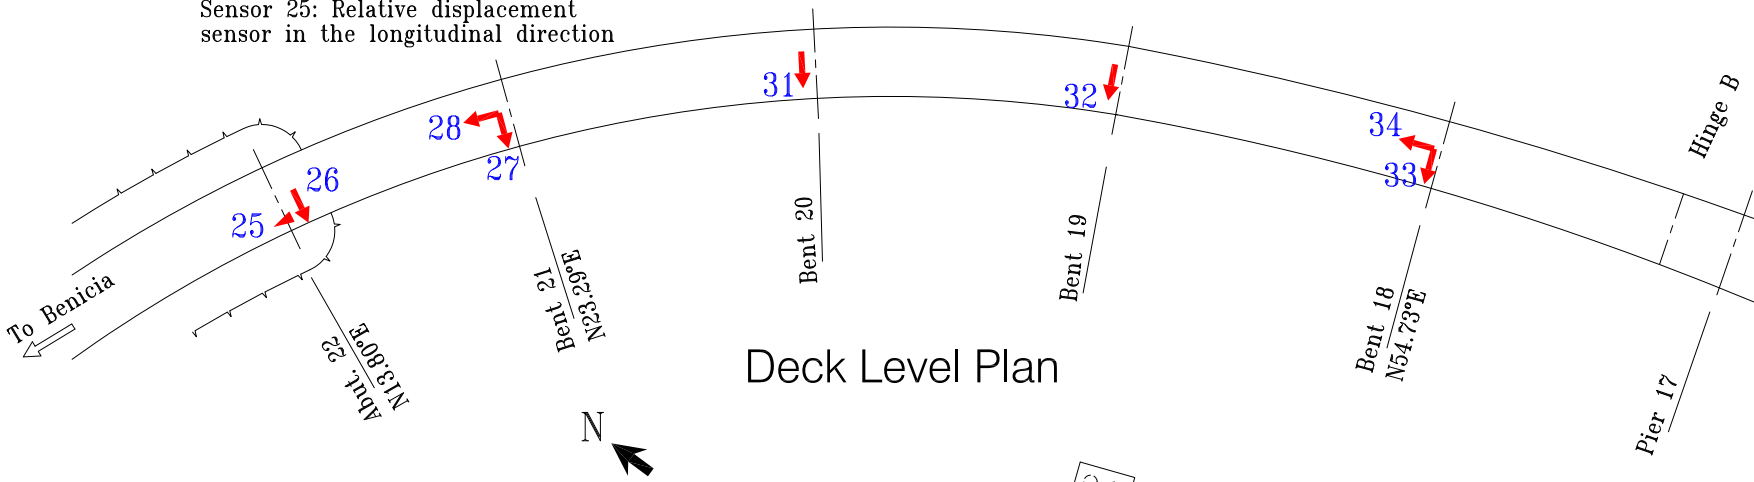

Deck Level Plan



Foundation Plan

[illegible]

12.56m

2.5m

1.2m

2m

2.4m

9.5m±

1.0m

8.5m

9.5m

Sensors are located on the floor. North of bent cap.

27

28

29

30

 
Isolation Casing

Cut-off Elev. 21.5m


Tip Elev. 12.0m

Installed 8/8/07
Diagram: 1/14/07


SENSOR LOCATIONS - Approach (NW Line)

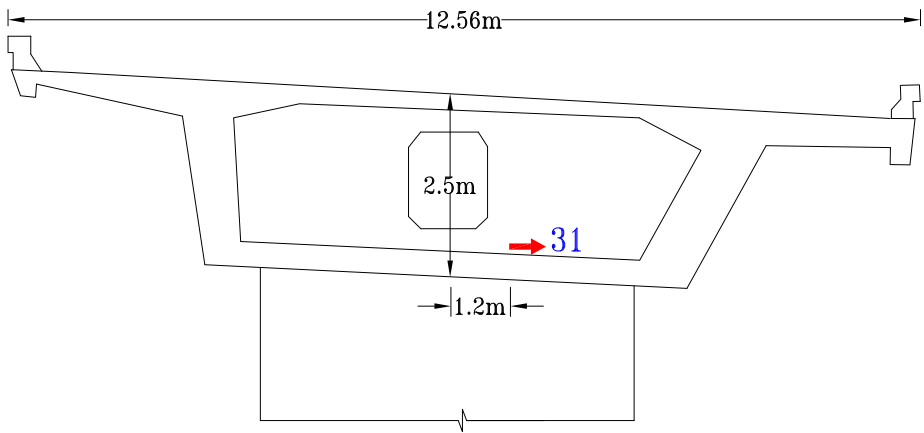

Transverse Section at Bent 20

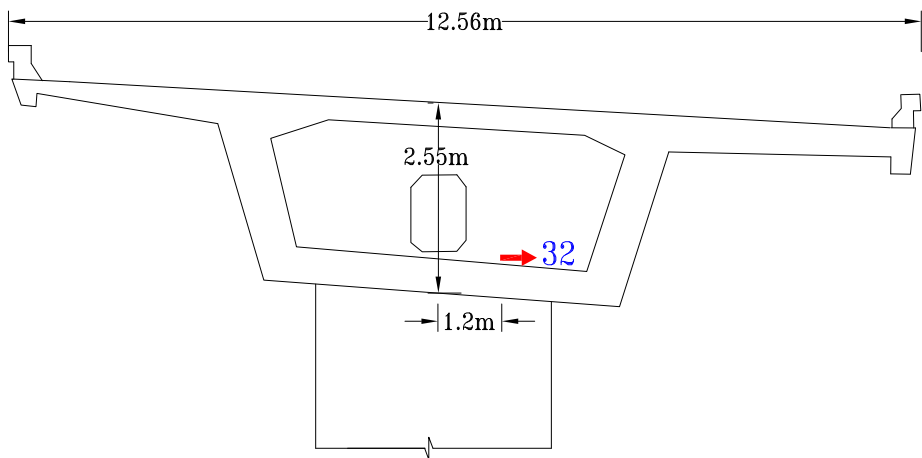 



Transverse Section at Bent 19

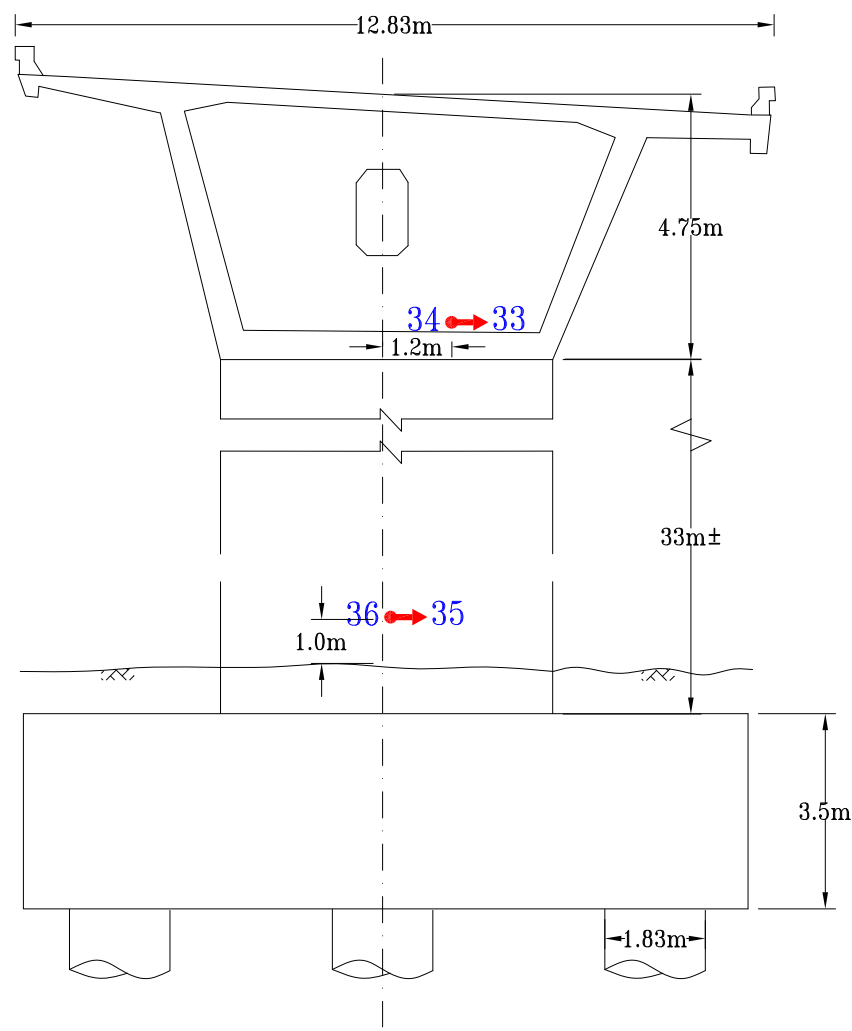 


Transverse Section at Bent 18

  SENSOR LOCATIONS - Main Bridge

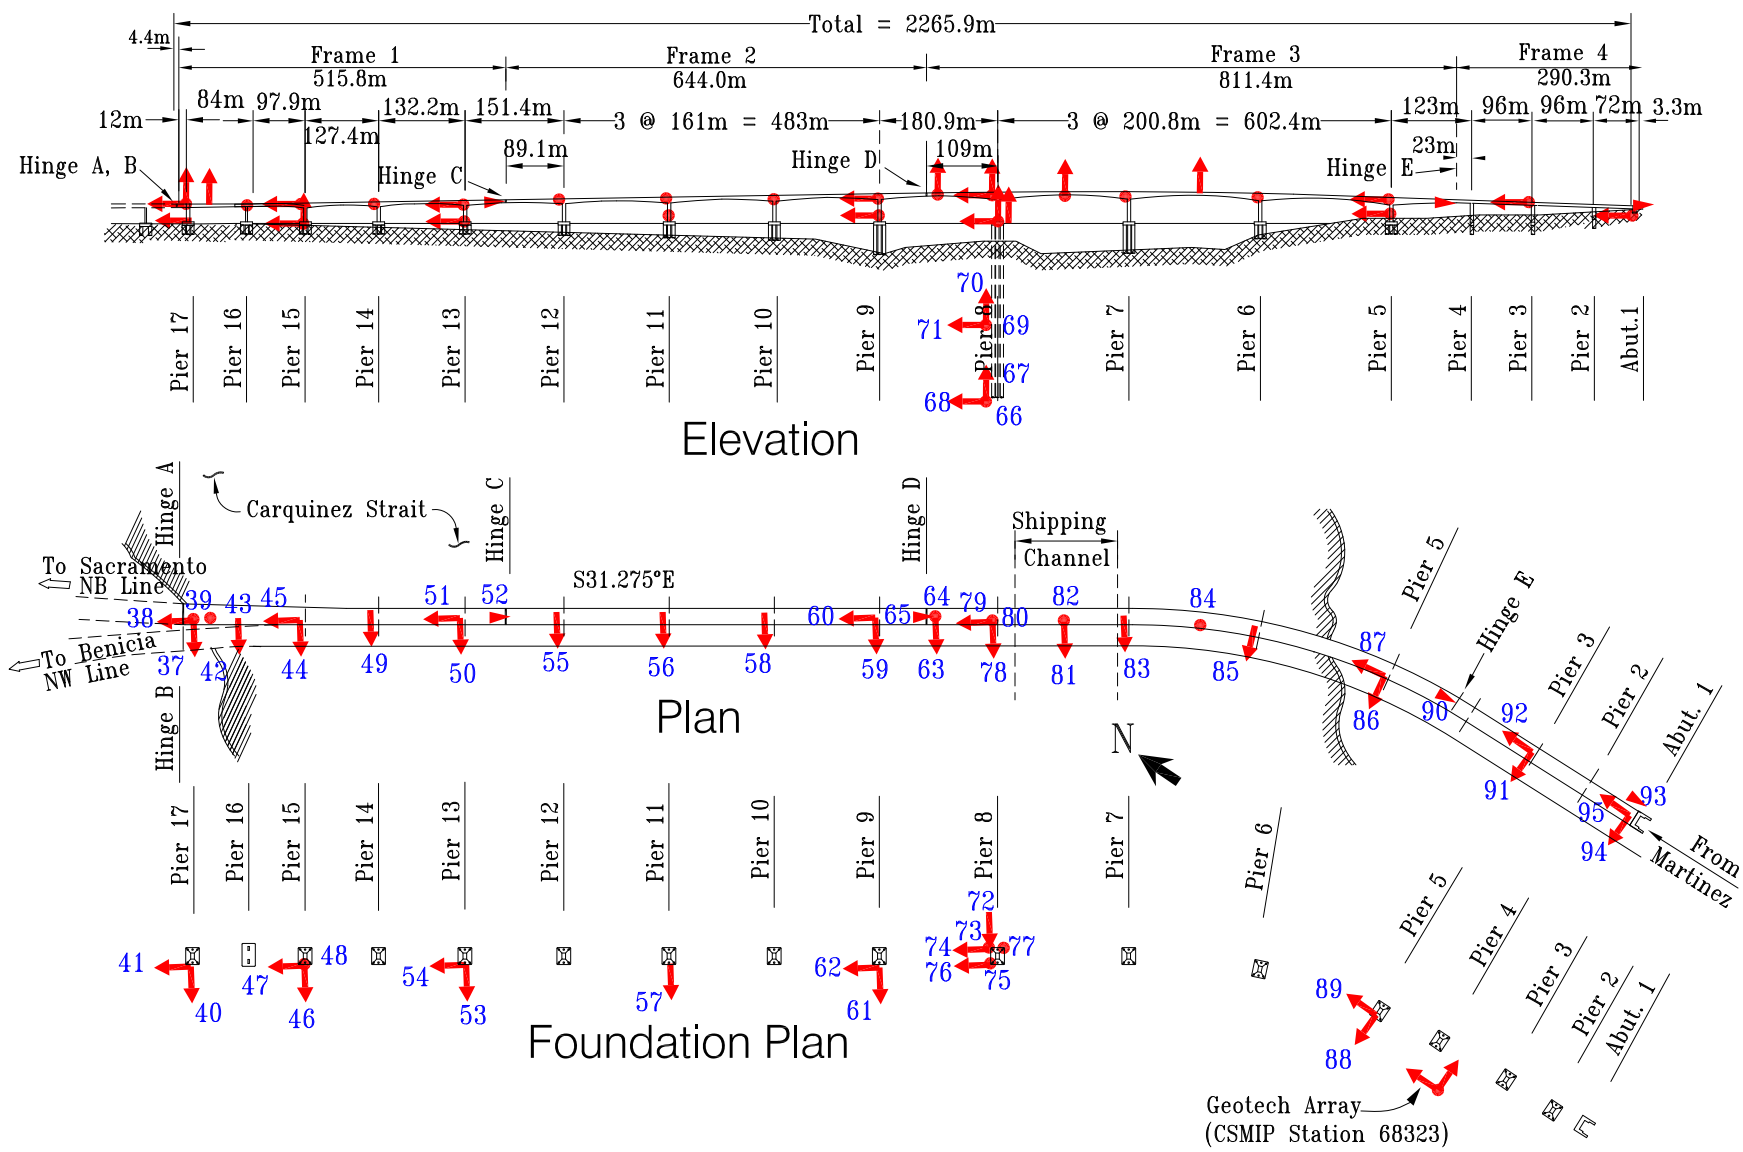


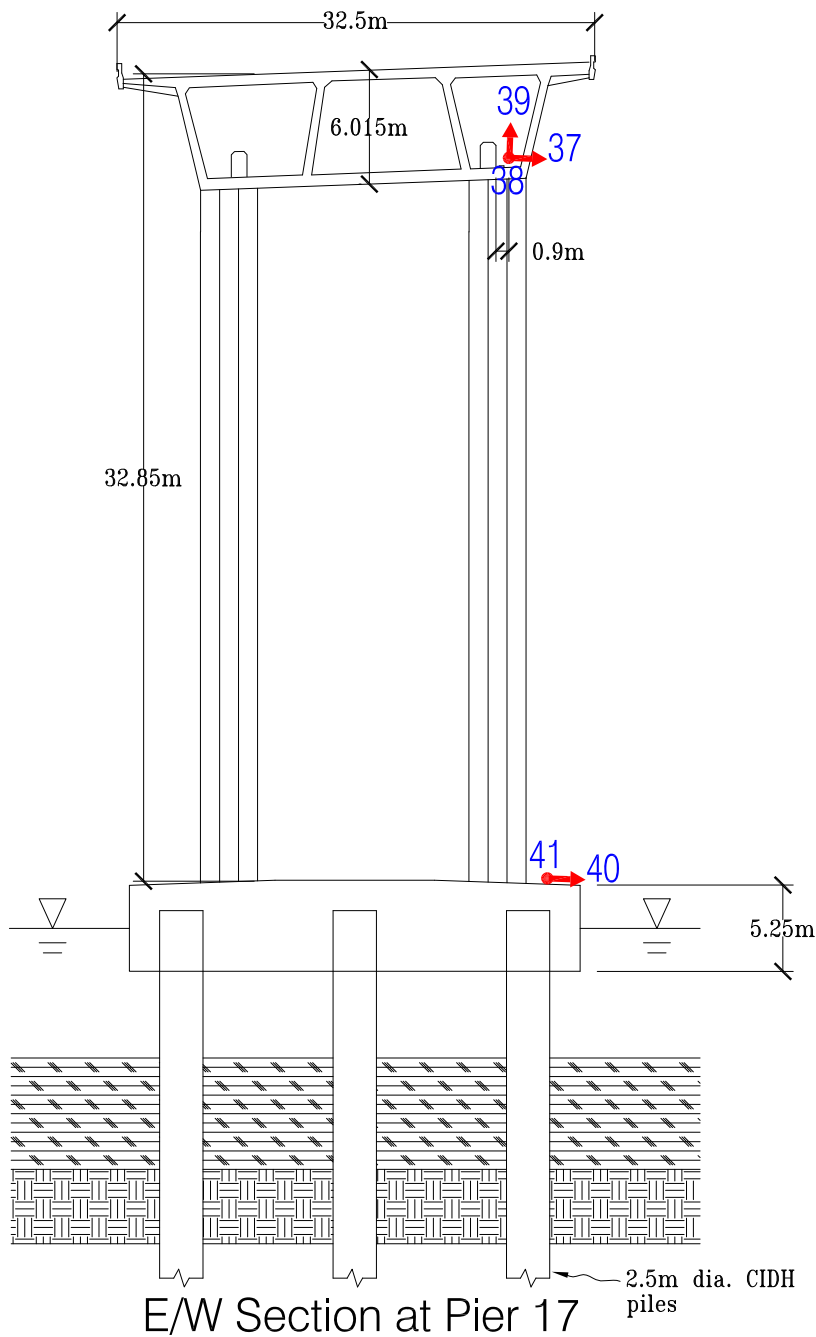


SENSOR LOCATIONS - Main Bridge

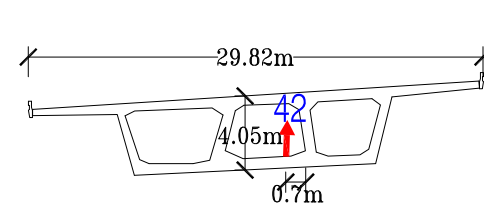 

E/W Section at Pier 16


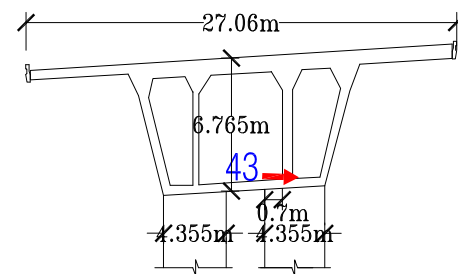 


E/W Section at Pier 15



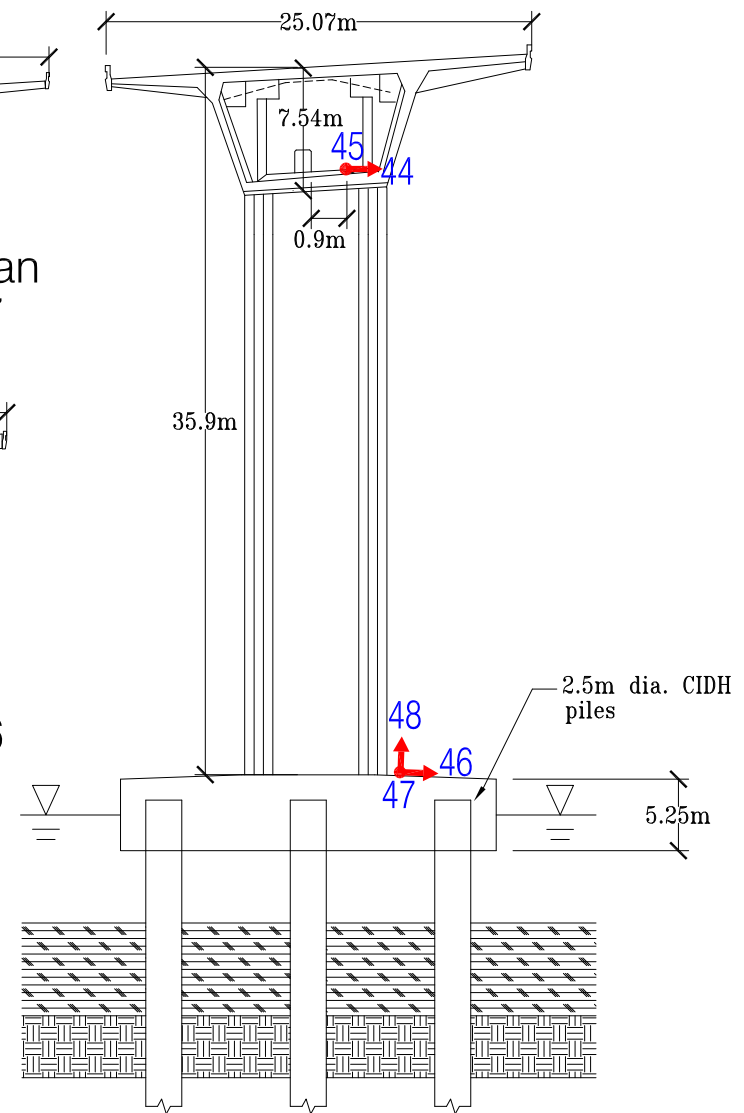 


E/W Section at Pier 15

  SENSOR LOCATIONS - Main Bridge

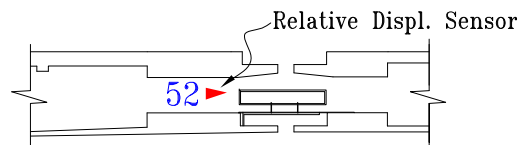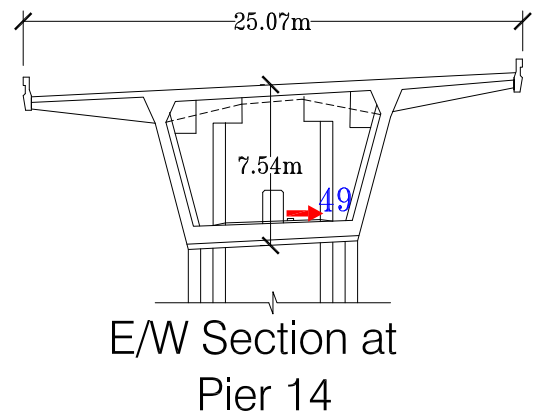


N/S (Longitudinal) Section of Hinge C

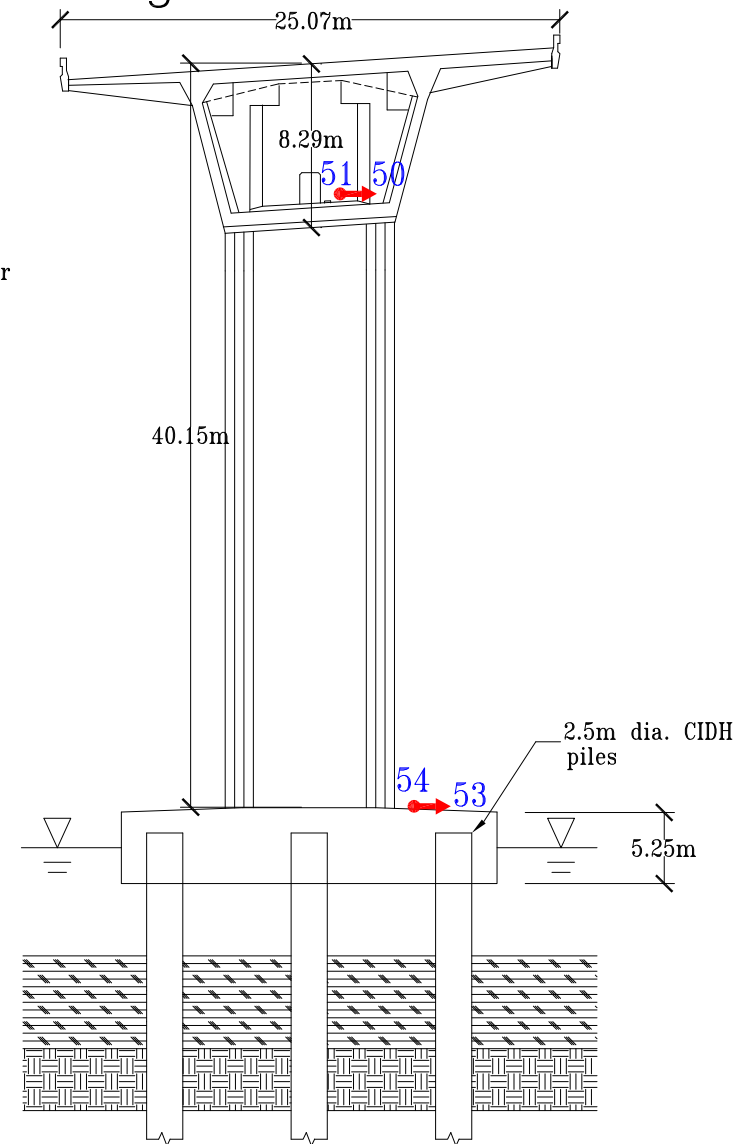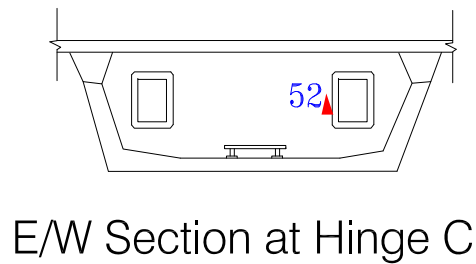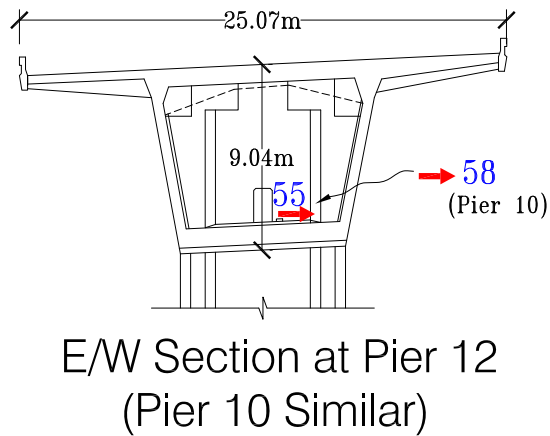   


E/W Section at Pier 13



 
SENSOR LOCATIONS - Main Bridge

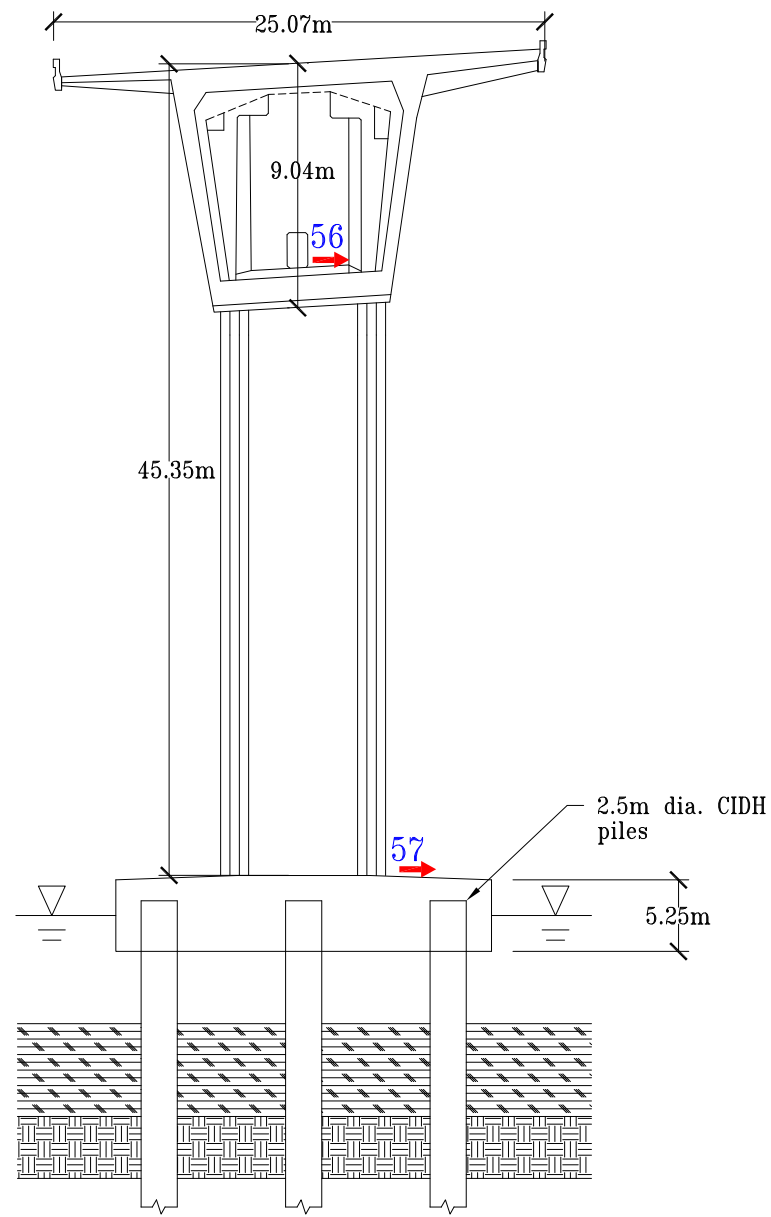


E/W Section at Pier 11

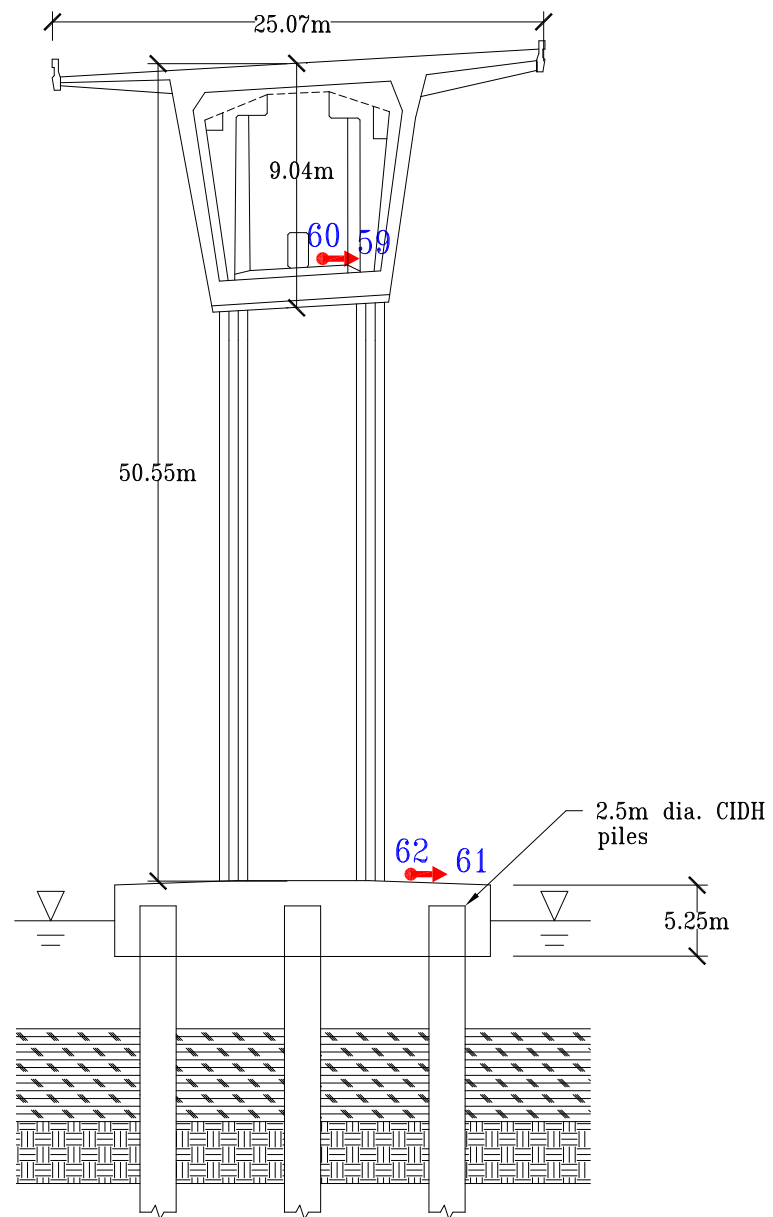 


E/W Section at Pier 9

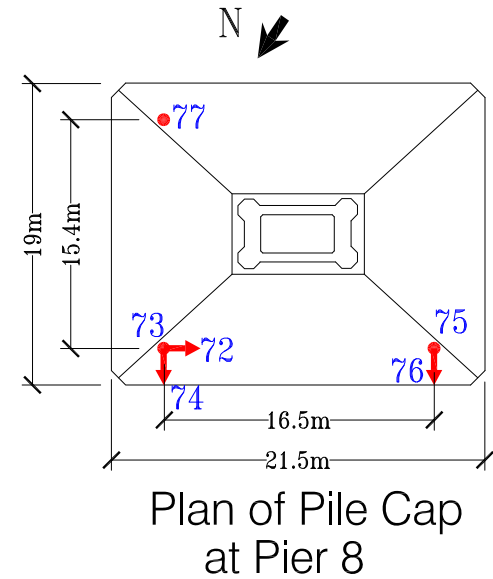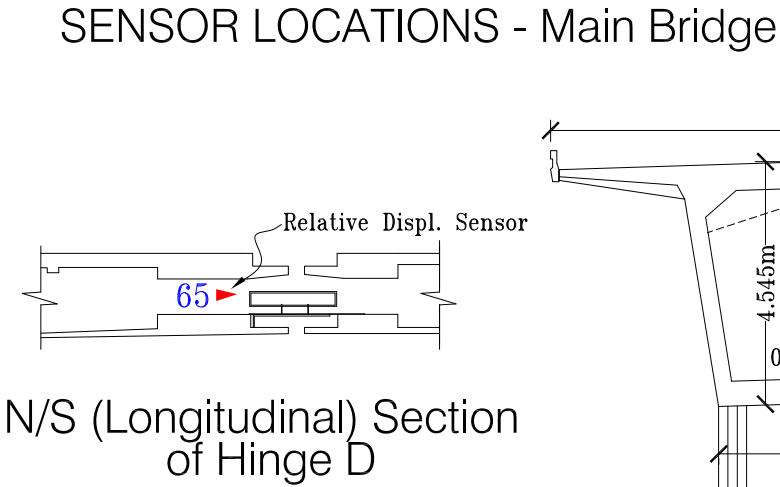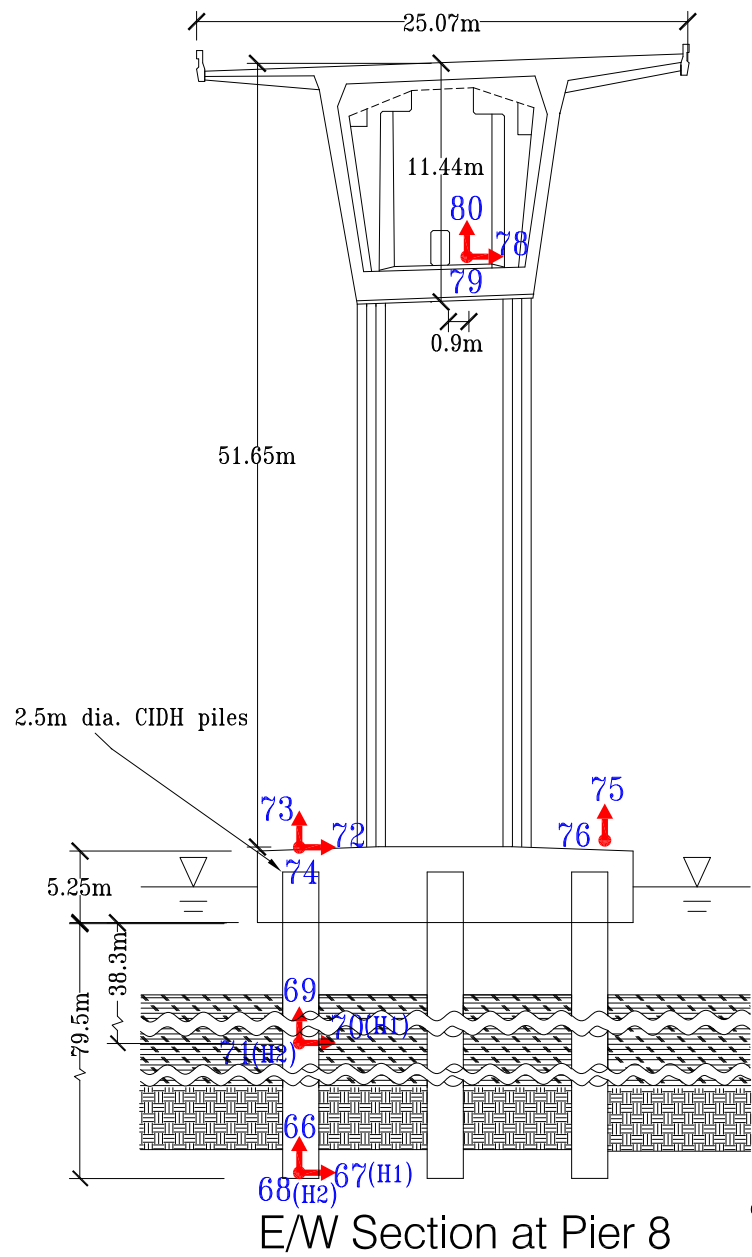   

H1,H2:unknown orientations




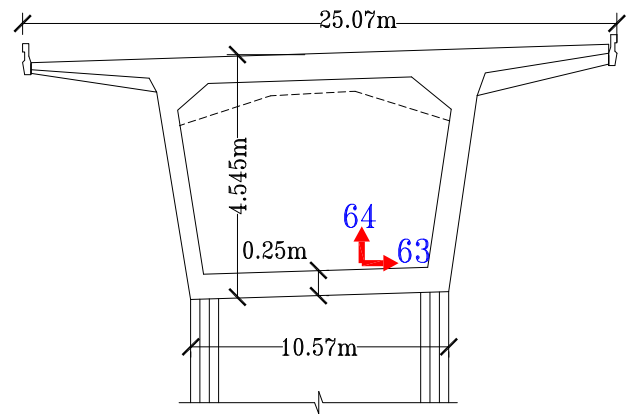 


 E/W Section of Midspan between Piers 9 & 8

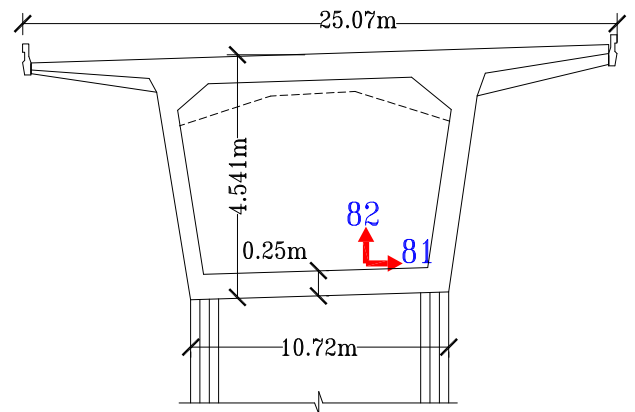


E/W Section of Midspan between Piers 8 & 7

    
SENSOR LOCATIONS - Main Bridge

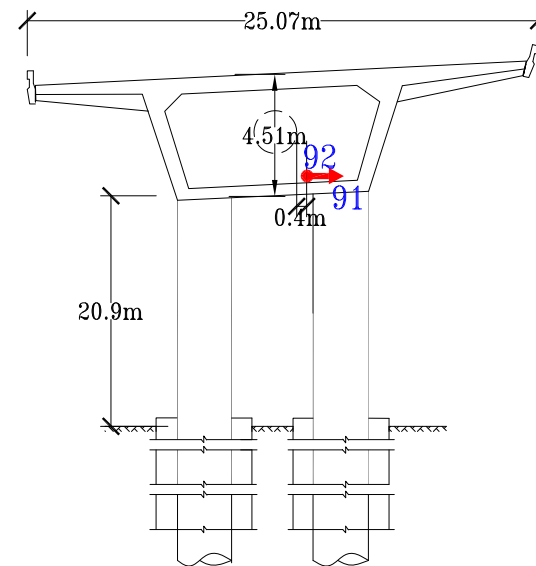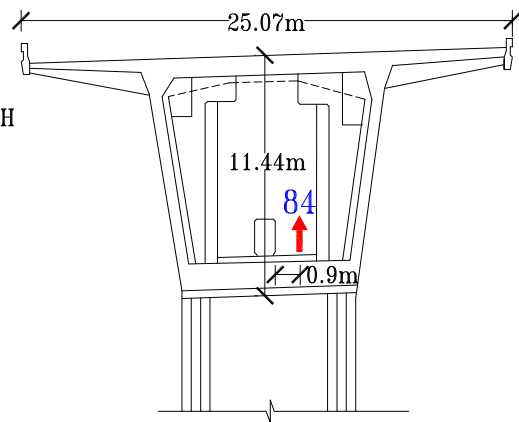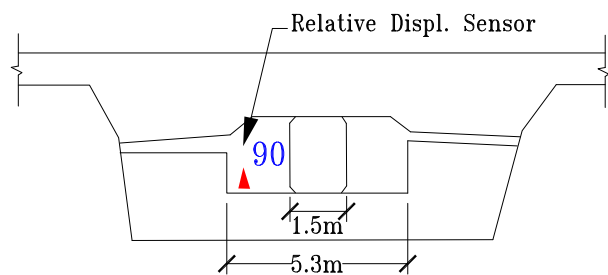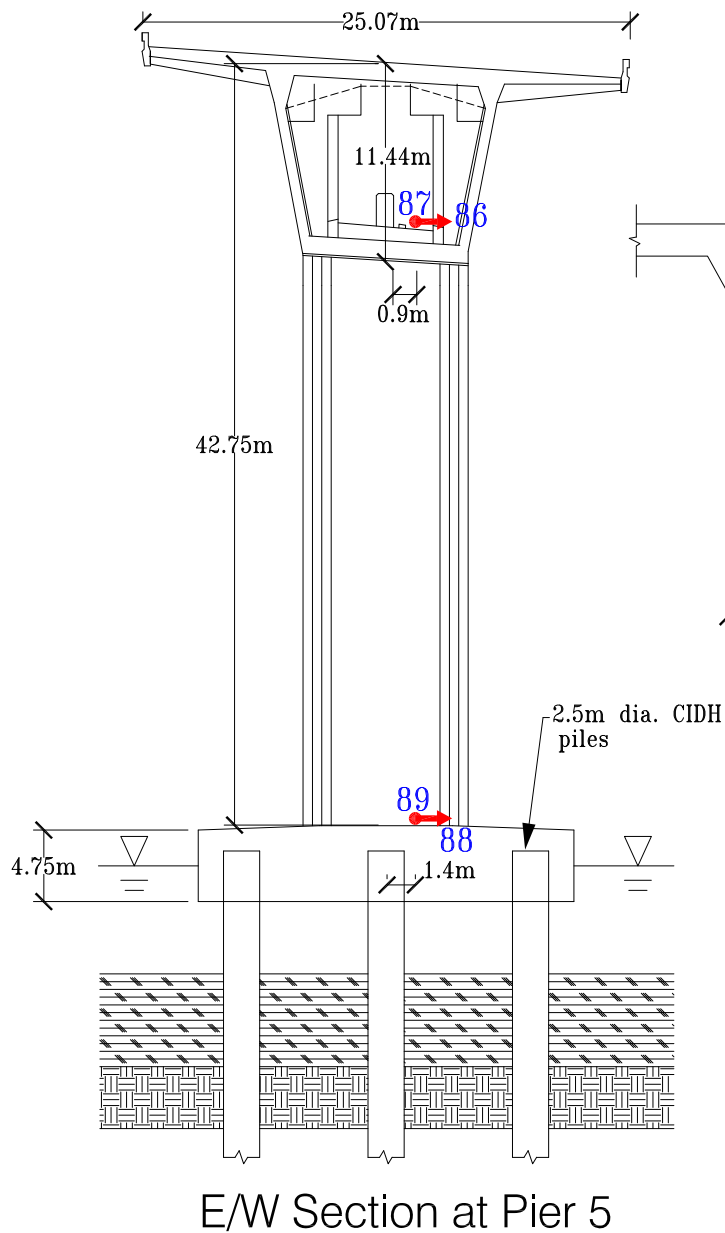

SENSOR LOCATIONS - Main Bridge

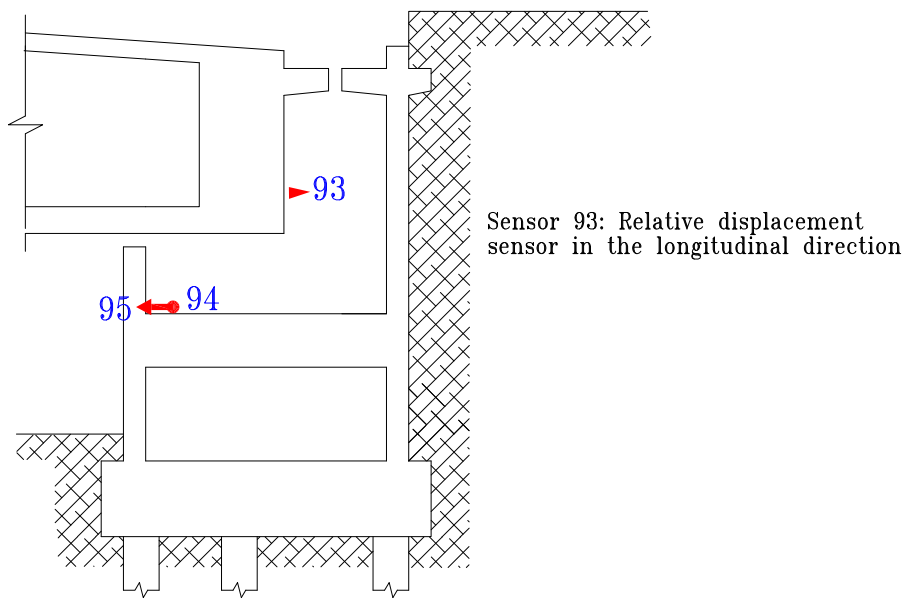 

Sensor 93: Relative displacement
sensor in the longitudinal direction

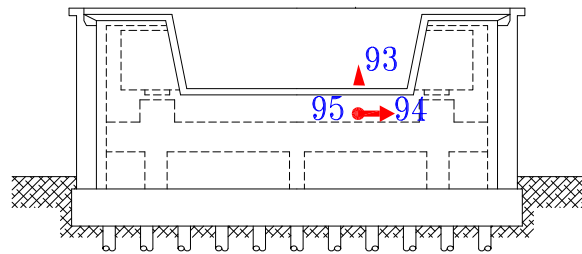 

E/W Section at Abut. 1

N/S (Longitudinal) Section
at Abut. 1